

The Party Corner

19 E. Newman Springs Rd. Shrewsbury, N.J. 07702
732-741-0040 Fax: 732-747-1589

www.partycorner.com

Email: info@partycorner.com

“So many reasons to party....but only one place to shop!”
Since 1969, serving all your party and event rental needs.

OPERATING INSTRUCTIONS POPCORN MAKER

LIGHT AND WARMER SWITCH - Turns on the heat to the bottom corn pan and heat light.

KETTLE MOTOR SWITCH - Turns on the motor which drives the kettle agitator.

KETTLE HEAT SWITCH - Supplies power to the thermostat controlled kettle.

1. Turn both the kettle heat and kettle motor switches “ON”. Let the kettle heat for 2 minutes.
2. ONLY POP ONE BAG AT A TIME.
3. Load the oil first, then popcorn. Close the lid.
4. When the corn has finished popping, gently dump the kettle.
5. Repeat the cycle, starting with step number 3, until the desired amount of popcorn has been achieved. Always pop 3 to 5 consecutive batches for the best popcorn.
6. On the final kettle of corn, it is a good idea to turn the kettle heat switch “Off” just as the lids are forced open by the popping corn. This procedure saves electricity since the kettle has plenty of heat and eliminates smoke/odor from any oil residue that remains after you have stopped popping.

NEVER LEAVE THE HEAT ON WHEN YOU ARE NOT POPPING!

To serve popcorn, scoop directly with box and serve fresh. Each package of corn/oil will make 8 – 10 oz servings.

