

The Party Corner

19 E. Newman Springs Rd. Shrewsbury, N.J. 07702
732-741-0040 Fax: 732-747-1589

www.partycorner.com

Email: info@partycorner.com

“So many reasons to party....but only one place to shop!”
Since 1969, serving all your party and event rental needs.

OPERATING INSTRUCTIONS SNO-KONE MACHINE

1. Fill the hopper to within an inch from the top with ice cubes or block ice (no larger than 3 to 4 inches). The larger the pieces, the better the snow.
2. Switch the motor on, and wait for it to reach full speed (this will take a few seconds).
3. Press the pusher handle down against the ice in the hopper. Apply firm and even pressure to make the best snow. Practice will enable you to gauge when to stop. This allows the ice to resetttle against the shaver head. You may find that you need to relieve the pressure two or three times during a cycle. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.

NOTE: Never allow any foreign or metallic objects around the shaver area of the Sno-Kone. Ice picks, scoops, and debris that may be in the ice often damage blades.

Ice Requirements: The Sno-Kone machine can take ice cubes or block ice, if you break the block into pieces approximately 3 to 4 inches in size. NOTE: The ice will not enter the shaving chute if the pieces are too large.

After ice is shaved, scoop into cones and top with desired flavor of syrup. We off a variety of flavors.

