

The Party Corner

19 E. Newman Springs Rd. Shrewsbury, N.J. 07702
732-741-0040 Fax: 732-747-1589

www.partycorner.com

Email: partycorner@msn.com

"So many reasons to party...but only one place to shop!"

Since 1969, serving all your party and event rental needs.

OPERATING INSTRUCTIONS SNOW CONE

MACHINE DESCRIPTION

The Sno-Konettes are manual ice shavers with a tremendous capacity. The Sno-Konette consists of the hopper, which houses the cutter head, the pusher handle, the motor, and the display case.

ELECTRICAL REQUIREMENTS

The Sno-Konette operates on 120 Volt, 15 Amp, single phase, 60 cycle AC current. Be sure that your electrical supply meets this requirement.

ICE REQUIREMENTS

The Sno-Konette can take ice cubes or block ice, if you break the block into pieces approximately 3 to 4 inches in size.

NOTE: The ice will not enter the shaving chute if the pieces are too large.

MACHINE OPERATION

After unpacking the Sno-Konette you should locate the pusher handle (packed in a separate box). Connect the pusher handle to the shaver body. Plug the power cord into the appropriate electrical outlet.

TO OPERATE THE SNO-KONETTE

1. Fill the hopper to within an inch of the top with ice cubes or block ice (no larger than 3" to 4"). The larger the pieces, the better the snow.
2. Switch the motor on. Wait for the motor to come to full speed (a minute or so).
3. Push the pusher handle down against the ice in the hopper. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the shaver head. You may find that you need to relieve the pressure two or three times in a cycle. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.

NOTE: Never allow any foreign or metallic objects around the shaver area of the Sno-Konette. Ice picks, scoops, and debris that may be in the ice often damage blades.

Sno-Konette

All Models

